

Inline Filter

Replacing inline Tube to Tube carbon filter

1. Turn off water supply valve under sink, found on small tubing inlet side of filter.
2. Release pressure by opening either, filter tap on sink or glass dispenser of fridge.
3. Remove red clips if present.
4. Pushing the Small Outer Ring of filter at the same time slowly pull on tube, and tube will be removed from filter (please note if Small Outer Ring is not pushed in, tube will NOT come out).
5. Discard old filter.
6. Remove Dust Plugs, on both ends of new filter, by pushing Small Outer Ring and pulling plug at the same time.
7. Connect water supply to inlet side of filter (arrow will be on filter in direction of flow).
8. BEFORE connecting outlet side, place a bucket under filter and slowly turn on water supply valve to flush filter 1-2 minutes into bucket.
9. Turn off water and re connect outlet side (going to fridge or filter tap). Turn water back.
10. Refit red clips.
11. Inspect for any leaks.

IMPORTANT When reconnecting make sure tube is pushed fully into filter

