

Q Series

Replacing Q Cartridges

1. Turn off water supply under sink, found on small tubing inlet side of filter.
2. Release pressure by opening filter tap on sink and leave open for duration of process.
3. Undo inlet side filter and discard, **leaving outlet side filter in place.*****
4. Insert new filter to inlet side.
5. Turn water back on and allow water to flow (flushing) for five minutes.
6. Turn water off, remove outlet side filter and discard.
7. Insert new filter to outlet side.
8. Turn water back on and allow water to flow (flushing) for five minutes.
9. Inspect for any leaks

***VERY IMPORTANT

You **MUST** individually flush the filters, **NEVER INSERT ALL NEW FILTERS TOGETHER.** If for some reason you cannot leave the old outlet side filter in place or if it is a new installation, in that case you would need to place a bucket under the now empty outlet side and flush the inlet side filter into the bucket.

